




# Woodpecker Detering System Trowelable Putty

## IPOLE-WPD INSTALLATION INSTRUCTIONS

### IPAK Clip-Paks

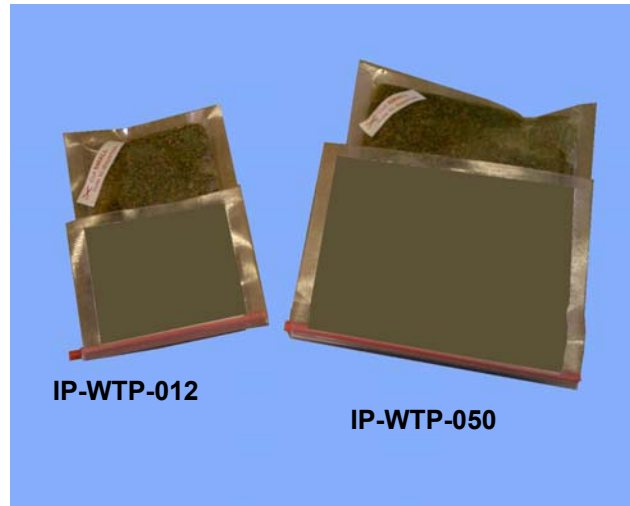

### Mixing Instructions

- **GENTLY PEEL** the **RED** Rod from the **CLEAR IPAK** Channel.
- **HOLDING** the **IPAK** in one hand, **KNEAD** the contents using the fingers of the other hand.
- **KNEAD** the contents of the pouch until the **COLOR** is **UNIFORM**.

### Application Instructions

- **CUT SMALL HOLE** in one corner of the **IPAK** Pouch.
- **SQUEEZE** Sniff'n'Stop into and around foraging holes (peck-outs), nesting cavities, and other areas of obvious woodpecker activity.
- **FOR NEW POLES**. Evaluate woodpecker activity on adjacent poles to determine if there is a pattern. If a pattern is found, apply **IPOLE-WTP** onto these sections of the new pole.
- **PREVENTATIVE MAINTENANCE**. Apply **IPOLE-WTP** onto high structural stress areas of the pole where woodpecker damage could lead to structural failure. Such areas include crossarms, guys, braces, insulators, etc.

### PROPERTIES

|                               |   |  |
|-------------------------------|---|--|
| Working Time                  | - | 4-6 hrs. (@77°F)                                 |
| Tack Free Time                | - | 12 hrs. (@77°F)                                  |
| Thorough Cure Time            | - | 72 hrs. (@77°F)                                  |
| Clean-Up Solution             | - | Soap, Water and Rubbing Alcohol                  |
| Coverage<br>(on flat surface) | - | IP-WTP-012 - 1 sq. ft.<br>IP-WTP-050 - 4 sq. ft. |



**IFOAM Specialty Products  
Corporation**