




Woodpecker Detering System

Trowelable Putty

INSTALLATION INSTRUCTIONS

IPOLE-WPD Kit Contents:

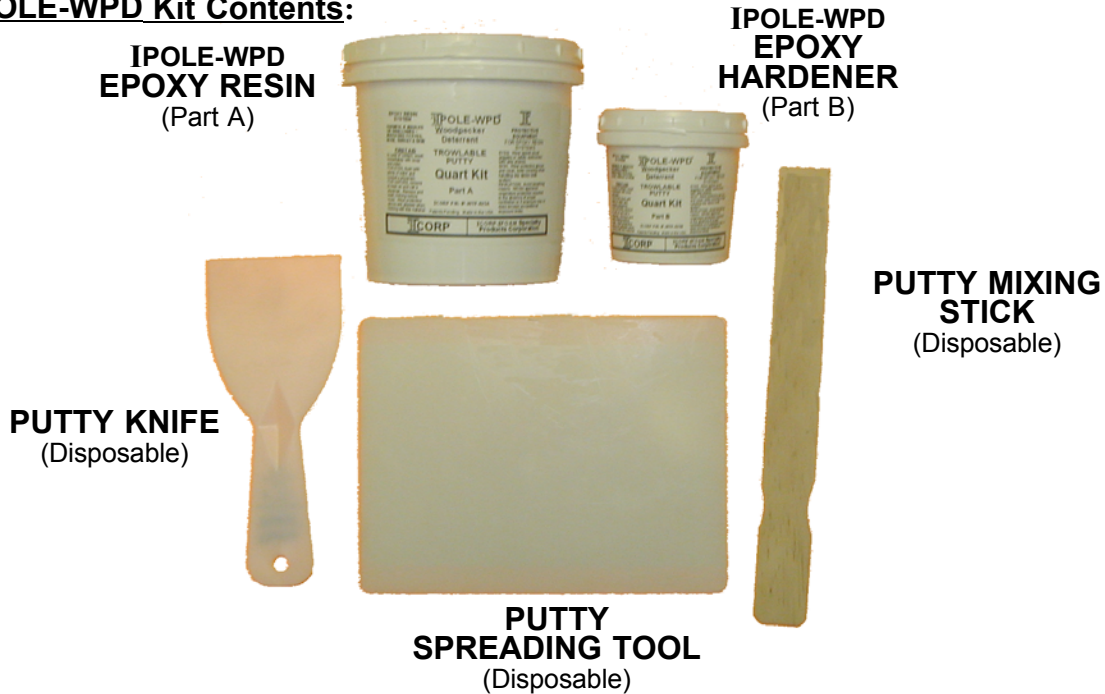

Mixing Instructions

- **POUR** contents of the **SMALLER IPOLE-WPD** bucket (**PART B**) into the **LARGER** bucket containing **PART A**.
- Using the included **PUTTY MIXING STICK**, **MIX** until color is **UNIFORM**.

Application Instructions

- **Existing Poles.** Using **PUTTY KNIFE** and **PUTTY SPREADING TOOL**, apply **IPOLE-WPD** onto sections of in-service wood poles that show evidence of previous woodpecker activity. These areas include around nesting cavities, foraging holes, and peck-outs.
- **New Poles.** Evaluate woodpecker activity on adjacent poles to determine if there is a pattern. If such a pattern is found, apply **IPOLE-WPD** onto these sections of the pole.
- **Preventative.** Apply **IPOLE-WPD** onto high structural stress areas of the pole where woodpecker damage could lead to structural failure. Such hardware attachment points include crossarms, guys, braces, insulators, etc.

PROPERTIES

Working Time	-	5-6 hrs. (@77°F)
Tack Free Time	-	12 hrs. (@77°F)
Thorough Cure Time	-	72 hrs. (@77°F)
Clean-Up Solution	-	Soap, Water and Rubbing Alcohol
Coverage	-	10 sq. ft.



IFOAM Specialty Products Corporation